# Wireless control unit 868MHz U2W2 230V 4/8/12 zones

The wireless control unit **U2W2 - 230V** - 868 MHz is smart base station with <u>no wires</u> to manage room thermostats (**T2WB** e/o **T2WBD**) and actuators (**A542O2**) in order to set and keep the temperature in different rooms.

The wireless control unit **U2W2 - 230V -** 868 MHz can deliver the power to move actuators (**A542O2**) and it can install a bidirectional communication with thermostats, throughout the most recent 868 MHz radio technology.

This unit records and uses an important amount of measured data to control singularly the room temperature, in order to guarantee the maximum comfort.

The standard version is equipped with a technological software, able to comply every management requirement with current and next heating systems have; since this branch looks

constantly ahead, every software and settings update can be done by inserting a MicroSD memory card. MicroSD slot is on the bottom and the card is optional.



#### **CARATTERISTICHE TECNICHE**

- Wireless communication between room thermostat (T2WB or T2WBD) and the wireless control unit U2W2 -230V)
- Technology 868 MHz
- Thermostat status indication
- "Antifreeze" function
- <u>Heating</u> and <u>cooling</u> systems adjustment function for single rooms, managing up to 12 zones (according to version)
- Management of maximum 18 actuators and 12 room thermostats (according to the control unit version), a pump/boiler, CO signal generator, a dry bulb humidity sensor and external clock
- System setting by MicroSD card

#### **INFORMAZIONI GENERALI**

#### Name

**U2W204** to manage maximum 4 room thermostat (**T2WB** or **T2WBD**) – 4 zones

**U2W208** to manage maximum 8 room thermostat (**T2WB** or **T2WBD**) – 8 zones

**U2W212** to manage maximum 12 room thermostat (**T2WB** or **T2WBD**) – 12 zones

Each room thermostat can drive several zones.

### **Packaging content**

- 1 x wireless control unit U2W2 230V 868 MHz
- 1 x instruction manual
- 1 x fixing metallic bar

#### **Accessories (optional)**

External antenna U2WA – it extends the radio signal range of the control unit

Signal repeater U2WR – it increases the unit control radio range

Humidity sensor U2DP o U2DPRS – it measures humidity and dew point for heating/cooling floor applications

#### USE

The wireless control unit **U2W2 - 230V** is used in conditioning systems for new buildings as well as renovations like houses, offices, stores, etc...

Using the wireless control unit **U2W2 - 230V** the installation time can be consistently reduced; that is a great benefit for installers. The wireless control unit **U2W2 - 230V** is often installed in manifold wall boxes. This product is developed for the connection of 4-8-12 room thermostat (**T2WB** or **T2WBD**) and 18 actuators (**A542O2**).

Wireless room thermostat installation (T2WB o T2WBD) is very easy because no wiring is needed. The free tool connection and the clear color codification allow to quickly link wires (actuators, boiler, pump, etc.). All wires are placed in specific guides, in order to have a clear and orderly arrangement and a fast installation of the wireless control unit U2W2 - 230V.

#### "Antifreeze" function

Every actuator outlet has protection function against freezing, independently of the operation mode. As soon as the set antifreeze temperature is overpassed (5 ... 10°C), actuators A542O2 of the corresponding heating zone are switched on, until reaching the safety set temperature. "Antifreeze" temperature can be set by the MicroSD card.

# **Pump protection function**

The pump is periodically activated (default intervals are set) to avoid any damage due to too long stops. During that time, the LED pump is on.

## Valves protection function

When valves are closed for long time (for example, out of the heating season), they are cyclically open in every heated zone to avoid mechanic blocks.

#### Monitoring the dew point

If the system has a dew point sensor (to purchase separately) and humidity is measured, the valves of all circuits are closed to avoid damages to surfaces because of the moisture. Dew point sensor input is taken into account just in cooling mode.

# Safety temperature limitation


If a temperature limiter (optional) is installed, when the critical temperature (previously set) is overpassed, valves shut down and they preserve fragile surface of floors



# Connection of many control units

In case of use of many control units in a conditioning system, up to 7 control unit can be paired (Pairing), enabling global parameters exchange. The connection is done via radio or by means of BUS system (syBUS). The radio range has to be followed in order to pair units wireless. If the range is not enough, control units must be connected through the wired system syBUS. The communication type is the master/slave principle. All messages and actions are exchanged among control units. The master unit monitors in a centralized way the following functions:

- CO input/output (if the pilot function is activated)
- Boiler output
- Pump output

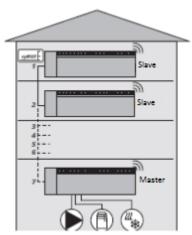

#### **TECHNICAL FEATURES**

Туре	U2W204	U2W208	U2W212
Supply voltage	230 V AC, ±15% / 50Hz		
Max. power consumption	50 W		
Fuse	5 x 20 mm, T4AH		
Max. n. of room thermostat	4	8	12
Max. n. of actuators	2 X 2 + 2 X 1	4 X 2 + 4 X 1	6 X 2 + 6X 1
Max. supply power for actuators	24W (12x 2W or 8x3 resp. or 18 x 1W)		
Max. switching power	1A/zone		
Frequency	868 MHZ-band		
Radiated power	<10 mW		
Range	Max. 25 m		
Standard and regulations	EN60730-1 / EN60730-2-9		
Dimensions (mm) WxHxD	225x75x52	290x75x52	355x75x52
Protection class	III		
Protection degree	IP20		
Environment temperature	da 0 a + 60° C		
Storage temperature	da -25° a + 70° C		
Air humidity	Max. 80%		
Solid wire	0,5 – 1 mm <sup>2</sup>		
Flexible wire	1 - 1.5 mm <sup>2</sup>		
Weight	500 g	650 g	760 g


### **APPROVALS**






# 225 mm 52 mm 52 mm 52 mm 52 mm 52 mm


### **PACKAGE CONTENT**

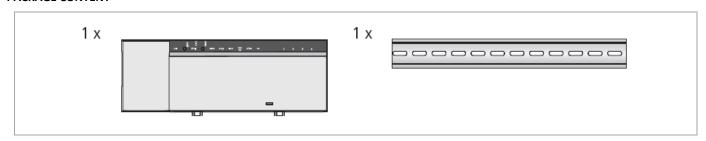


# INSTALLATION

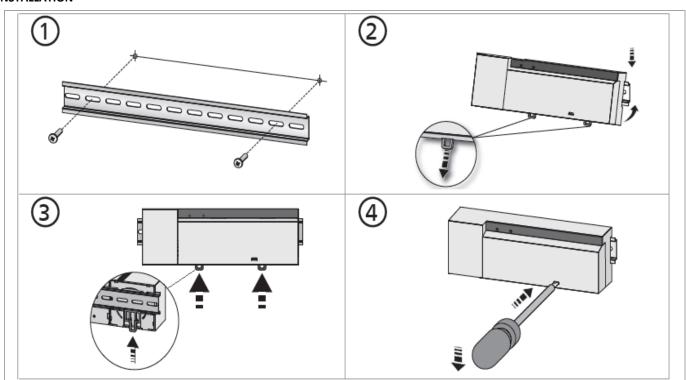


#### **ELECTRIC CONNECTION**

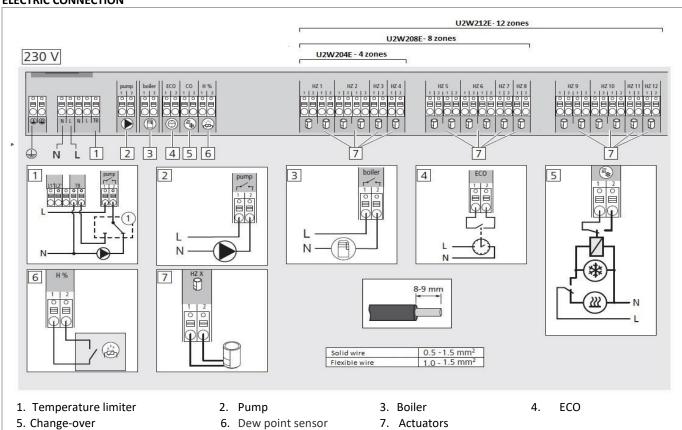


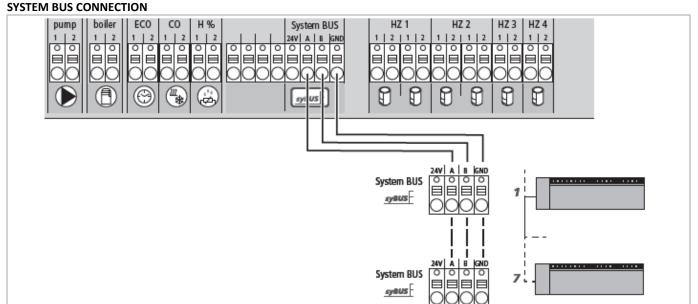

### **FUSE CHANGING**

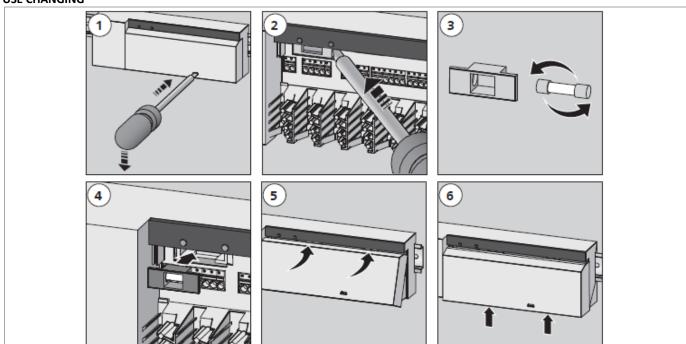

# COMMISSIONING

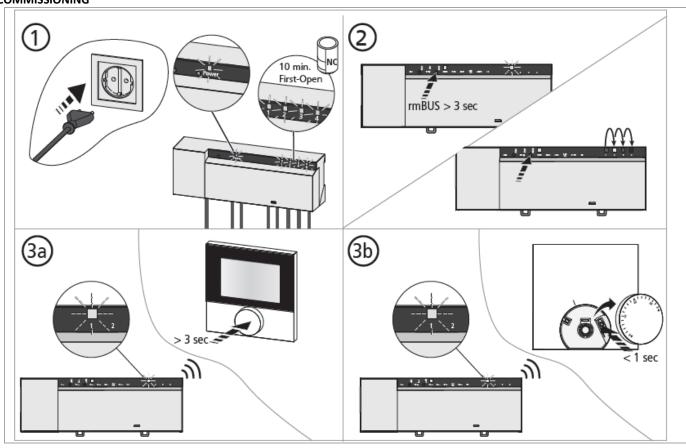

# **EXTERNAL TOOLS CONNECTION**

