# 93 / 93-1



# **EN Description**

The pressure independent control valve (PICV) combines the functions of a differential pressure controller, regulation valve and 2 port control valve into a single body.

The EVOPICV incorporates a small diaphragm cartridge type DPCV in order to keep a constant differential pressure across an orifice and to provide a constant flow rate whilst the differential pressure is with the operating limits of the valve. Beyond these working pressures the valve acts as a fixed orifice.

Making this orifice adjustable allows the valve to be pre-set deliver a range of flow rates. In the case of the EVOPICV valve this adjustment can be made in situ without removing any covers or actuators, the adjustment wheel is lockable by means of a combined memory stop and indicator.

The EVOPICV valve also includes 2 port temperature control by means of an oblique pattern globe valve. The plug of the globe valve is machined to give a near equi-percentage flow control characteristic. Due to the fact that the differential pressure across the valve seat is constant it can be said that the authority of this control valve is very close to 1.

Due to the way the EVOPICV valve controls the flow rate, irrespective of differential pressure branch and sub mains, balancing valves are not required. The flow rate is maintained at the terminal unit regardless of system conditions making the valve ideal for systems with inverter driven pumps.

Valves of the 93-1 series have not the pressure ports: this is the only difference to 93 series.

## **EN Valve features**

The 93 series PICV valve offers the following functions:

- Good valve authority to maintain temperature control and power output from the terminal unit using the complete stroke of the valve.
- Maximum design flow limitation: once set, the 93 valve maintains design flow regardless of pressure changes in the system.
- it can easily be set up once installed, using the external setting ring.
- Measure by means of specific meter of the differential pressure across the valve: in this way user can verify if the start-up pressure has been reached and overpassed. Not available on 93-1.

ΔP max.	Close off pressure *	Temperature	Working pressure max.	Stroke	Rangeability	Leakage	Accuracy 0 ÷ 1 bar
600 kPa / 6 bar	600 kPa / 6 bar	-10 ÷ 120 °C	2500 kPa / 25 bar	6 mm	50÷100 IEC 60534-2-3	Class IV IEC 60534-4	± 5%


	93L ¾"	93H ¾"	93L 1"	93H 1"	93L 1 1/4"	93H 1 ¼"
	93L1 ¾"	93H1 ¾"	93L1 1"	93H1 1"	93L1 1 1/4"	93H1 1 1/4"
Flow rate max.	2200 l/h	2700 l/h	2200 l/h	2700 l/h	2700 l/h	3000 l/h
	0,611 l/s	0,750 l/s	0,611 l/s	0,750 l/s	0,750 l/s	0,833 l/s
Start-up max.	25 kPa	30 kPa	25 kPa	30 kPa	30 kPa	35 kPa
	0,25 bar	0,30 bar	0,25 bar	0,30 bar	0,30 bar	0,35 bar
Connections	Rc ¾" union F	Rc ¾" union F	Rc 1" union F	Rc 1" union F	Rc 1 1/4" union F	Rc 1 1/4" union F
	EN 10226-1	EN 10226-1				

<sup>\*</sup> Closed by actuator




# 93 Series


# **EN** Dimensional data

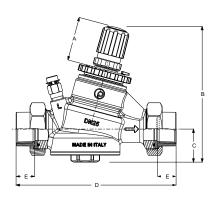


	Manual valve												
Art.		Flow rate [ I/h ]	Δ (mm) R (mm)		C (mm)	D (mm) E (mm)							
93L ¾" 93L1 ¾"		2200	47	152	38	176	17						
93H ¾"	93H ¾" 93H1 ¾"		47	152	38	176	17						
93L 1"	<b>93L1</b> 1"	2200	47	152	38	184	21,5						
<b>93H</b> 1"	93H1 1"	2700	47	152	38	184	21,5						
93L 1 1/4"	93L 1 ¼" 93L1 1 ¼"		47	152	38	209	22						
<b>93H</b> 1 1/4"	93H1 1 1/4"	3000	47	152	38	209	22						

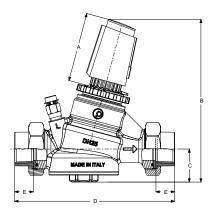

	Valve with thermo-electric actuator													
Art.  93L ¾" 93L1 ¾"  93H ¾" 93H1 ¾"		Flow rate [ I/h ]	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)							
		2200	79,5	187	38	176	17							
		2700	79,5	187	38	176	17							
93L 1"	93L1 1"	2200	79,5	187	38	184	21,5							
93H 1"	93H1 1"	2700	79,5	187	38	184	21,5							
93L 1 ¼" 93L1 1 ¼" 93H 1 ¼" 93H1 1 ¼"		2700	79,5	187	38	209	22							
		3000	79,5	187	38	209	22							

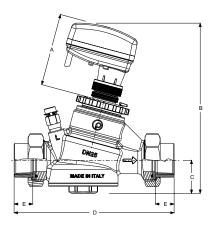


	Valve with electromotive actuator													
Art.  93L ¾" 93L1 ¾"  93H ¾" 93H1 ¾"		Flow rate [ I/h ]	Δ (mm) R (mm)		C (mm)	D (mm)	E (mm)							
		2200	83	196	38	176	17							
		2700	83	196	38	176	17							
93L 1"	93L1 1"	2200	83	196	38	184	21,5							
93H 1"	93H1 1"	2700	83	196	38	184	21,5							
93L 1 ¼" 93L1 1 ¼" 93H 1 ¼" 93H1 1 ¼"		2700	83	196	38	209	22							
		3000	83	196	38	209	22							

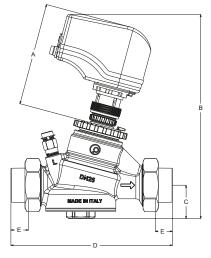


	Valve with VM060												
Art.		Flow rate [ I/h ]	Δ (mm) R (mm)		C (mm) D (mm)		E (mm)						
93L ¾" 93L1 ¾"		2200	117	233	38	176	17						
93H ¾" 93H1 ¾"		2700	117	233	38	176	17						
93L 1"	93L1 1"	2200	117	233	38	184	21,5						
<b>93H</b> 1"	<b>93H1</b> 1"	2700	117	233	38	184	21,5						
93L 1 1/4"	93L 1 ¼" 93L1 1 ¼"		117	233	38	209	22						
93H 1 1/4"	93H1 1 1/4"	3000	117	233	38	209	22						

# 93 Series

# EN Materials and weight

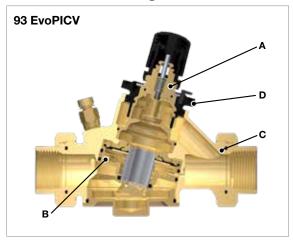

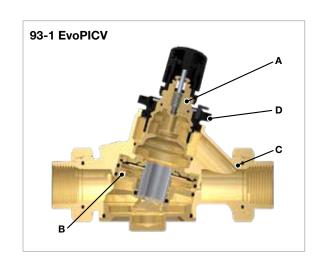

	Material list
Regulating valve (A)	Brass CW614N Stainless steel 18/8
Diaphragm (B)	High resistance polymer - EPDM Stainless steel AISI 303
Presetting (D)	High resistance polymer Brass CW614N
Body (C)	Corrosion resistant brass CW602N
Gaskets	EPDM-x

Art.	Weight (kg)
93L ¾"	2,30
93H ¾"	2,30
93L 1"	2,40
<b>93H</b> 1"	2,40
93L 1 1/4"	2,60
93H 1 1/4"	2,60

Art.	Weight (kg)
93L1 ¾"	2,30
93H1 ¾"	2,30
93L1 1"	2,40
<b>93H1</b> 1"	2,40
93L1 1 1/4"	2,60
93H1 1 1/4"	2,60

# EN Installation and maintenance EvoPICV 93 and 93-1

## 1. Use conditions

The valve has to be mounted with the arrow in the direction of the flow. Mounting it in the wrong direction may damage the system and the valve itself

If flow reversal is possible, a non-return valve should be mounted. Minimum differential pressure above which the valve begins to exercise its regulating effect:

	93L ¾"	93H ¾"	93L 1"	93H 1"	93L 1 1/4"	93H 1 1/4"
	93L1 ¾"	93H1 ¾"	93L1 1"	93H1 1"	93L1 1 1/4"	93H1 1 1/4"
∆P Start-up	25 kPa 0,25 bar	30 kPa 0,30 bar	25 kPa 0,25 bar	30 kPa 0,30 bar	30 kPa 0,30 bar	35 kPa 0,35 bar



Medium

Water / Water+glycol 30%

#### 2. Flow preset


To set the selected flow, follow these steps:



Lift the lock pin to unlock the selector



Turn the selector to the target position

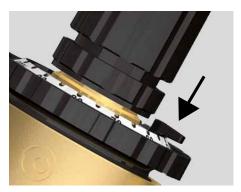

Press the lock pin to lock the selector in the final position

## 3. Operating control

It is necessary to be sure that the valve is actually working in the operating range. In order to verify it, just measure the differential pressure across the valve, as shown in the picture.

If the measured differential pressure is higher than the start-up pressure, the valve is actually keeping the flow constant at the set value.

Pettinaroli MDPS2 is the device which allows to do it: along with a smartphone and the dedicated app, it can directly give the user the differntial pressure compared to the start-up differential pressure of the valve (proper valve has to be selected among all the Pettinaroli EvoPICV catalogue).




#### 4. Maintenance and cleaning

During valve cleaning operations, use a damp cloth. DO NOT use any detergent or chemical product that may seriously damage or compromise the proper functioning and the reliability of the valve.

## 5. Actuator assembly

The valve can be equipped with a series of thermal-electric or electro-mechanical actuators, according to the requirements of the system. Actuators come along with an adaptor for proper mounting on the valve and for proper functioning of the whole device.



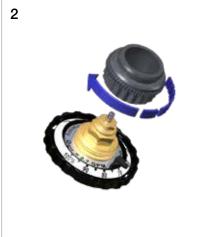




## 6. Diaphragm replacement and flushing

If the Diaphragm ( $\Delta P$  regulator) needs to be replaced or when flushing the pipework during pre-commissioning, follow instructions below.



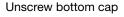




Unscrew the Diaphragm using an hexagonal socket wrench



Manually pull out the Diaphragm and replace with a new 093D. Wear gloves.

# EN Start-up curves and presetting



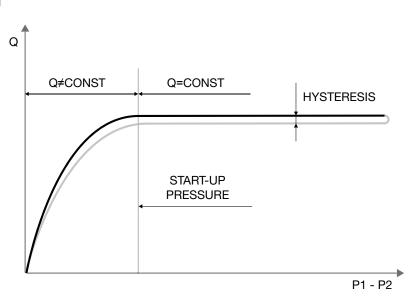


The example above shows a characterisitc curve where start-up pressure, hysteresis and accuracy can be evaluated.

Using a differential pressure gauge to measure the pressure drop the valve absorbs, allows to check whether the valve is in the operating range (and, therefore, whether the flow is constant) by simply verifying that the measured value P1 - P2 is higher than the start-up value.

If the  $\Delta P$  measured value is lower than the start-up value, then the valve works as a fixed orifice valve.

Start-up value varies with flow setting of the valve, as shown by the example below:

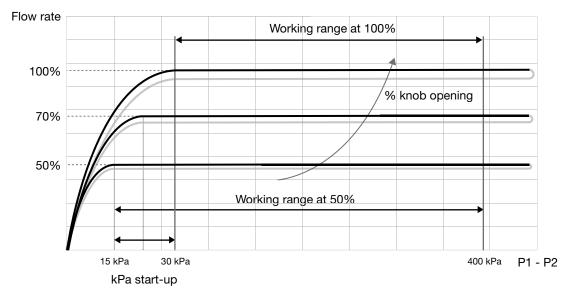




When the valve is set at 100% of nominal (maximum) flow, the curve begins to remain constant at 30 kPa, therefore the working range of the valve is  $30 \div 400$  kPa;


When the valve is set at 50% of nominal flow, the curve begins to remain constant at 15 kPa, therefore the working range of the valve is  $15 \div 400$  kPa.

The following diagrams show the start-up pressure at different presetting.

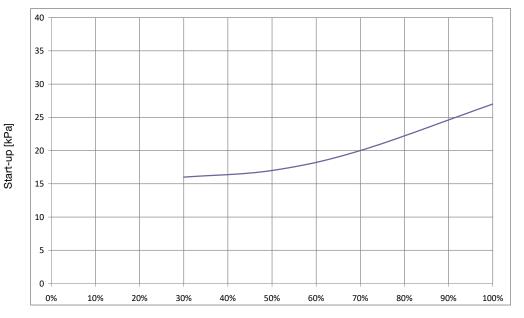

Valve model
93L 3/4" - 2200 l/h
93L1 3/4" - 2200 l/h
93L 1" - 2200 l/h
93L1 1" - 2200 l/h

Manual flow setting [%]

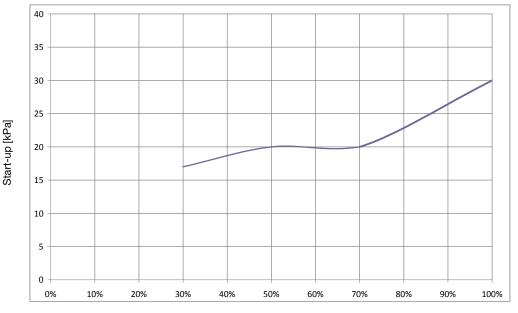

Valve model

93H 3/4" - 2700 l/h

93H1 3/4" - 2700 l/h

93H 1" - 2700 l/h


93H1 1" - 2700 l/h

93L 1 1/4" - 2700 l/h

93L1 1 1/4" - 2700 l/h

Manual flow setting [%]

6

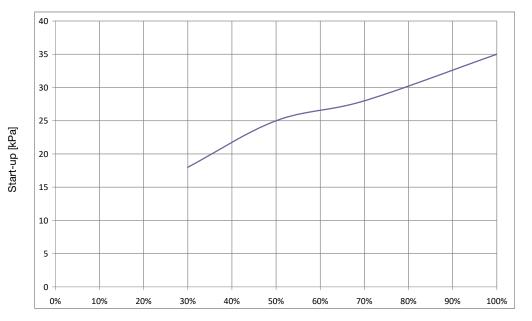

Valve model 93H 1 1/4" - 3000 l/h 93H1 1 1/4" - 3000 l/h

Manual flow setting [%]

# Flow pre-setting 93 / 93-1 EvoPICV

93L-93L1 ¾"		3L1 ¾"	93H-93	3H1 ¾"	93L-93L1 1"		93H-93H1 1"		93L-93L1 1 1/4"		93H-93H1 1 1/4"	
Presetting	Flow rate		Flow rate		Flow rate		Flow rate		Flow rate		Flow rate	
%	l/h	l/s	l/h	I/s	l/h	l/s	l/h	I/s	l/h	l/s	l/h	l/s
100	2200	0,611	2700	0,750	2200	0,611	2700	0,750	2700	0,750	3000	0,833
90	1980	0,550	2430	0,675	1980	0,550	2430	0,675	2430	0,675	2700	0,750
80	1760	0,489	2160	0,600	1760	0,489	2160	0,600	2160	0,600	2400	0,667
70	1540	0,428	1890	0,525	1540	0,428	1890	0,525	1890	0,525	2100	0,583
60	1320	0,367	1620	0,450	1320	0,367	1620	0,450	1620	0,450	1800	0,500
50	1100	0,306	1350	0,375	1100	0,306	1350	0,375	1350	0,375	1500	0,417
40	880	0,244	1080	0,300	880	0,244	1080	0,300	1080	0,300	1200	0,333
30	660	0,183	810	0,225	660	0,183	810	0,225	810	0,225	900	0,250
20	440	0,122	540	0,150	440	0,122	540	0,150	540	0,150	600	0,167
10	220	0,061	270	0,075	220	0,061	270	0,075	270	0,075	300	0,083


7

# 93 Series

## **EN Control curves**


Operating on the position of the regulating valve control stem A will modify the valve Kv, hence the flow rate. The relation between Kv and stroke is shown in the graph below.

Typical control valve characteristic curves.\*

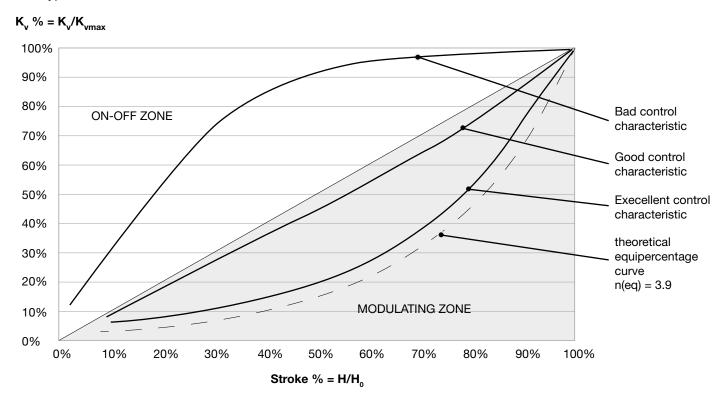


Combining the **EvoPICV** valve characteristic with heat exchanger results in a linear control system. In the next page control curves of 93 and 93-1 are shown.


\* Control curve characteristic may change according to valve version.

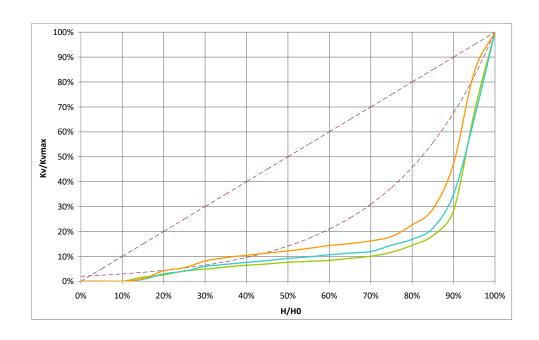





# EVO BIEV 93 Series

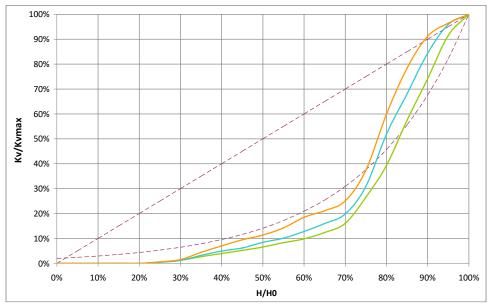

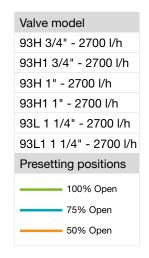

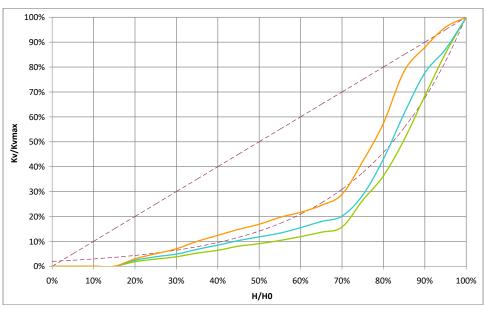

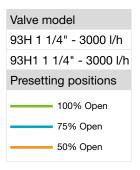

- H: current lift (opening) of the control valve; H varies from 0 to H<sub>0</sub>
- H<sub>0</sub>: maximum lift of the control valve;
- K<sub>v</sub>: valve flow factor at lift = H
- K<sub>vmax</sub>: valve flow factor at lift = H<sub>0</sub>

## **EN Actuators**

The table below shows actuator part numbers for different control types.

Туре	Standard	Stroke	Adaptor
24v, 0-10v Proportional	VA7482	6,3 mm	0A748X*
24v, 3 Point Floating	VA7481	6,3 mm	0A748X*
230v, 3 Point Floating	VA7481	6,3 mm	0A748X*
24v, 0-10v Proportional Thermic	A564P3	6,5 mm	VA64**
24v, ON-OFF Thermic, 2 wires	A564O2	6,5 mm	VA64**
230v, ON-OFF Thermic, 2 wires	A562O2	6,5 mm	VA64**
24v, 0-10v Proportional Fail Safe	VM060	6.5 mm	76TE**

Fratelli Pettinaroli is not liable for unauthorized use of actuator not shown in the table above. However, actuating force must not exceed 160 N.



#### **EN Accessories**





#### MDPS2

Digital differential manometer Bluetooth® for start-up test of PICV valves and flow rate measurement of Terminator balancing valves and Venturi devices. To be used with specific app installed on a smartphone.



#### **MDP**

Digital differential manometer differential pressure measurement.



#### **INSULATING CASES**

Insulating case for PICV. For heating and cooling installations.

093IHV: case for heating, closure by Velcro®. Size has to be specified.

093IHB: case for heating, closure by double-sided tape. Size has to be specified.

093ICV: case for cooling, closure by Velcro®. Size has to be specified.

093ICB: case for cooling, closure by double-sided tape. Size has to be specified.

Cases for heating let the headwork and the actuator uncover wheras those for cooling cover the actuator too (all those in the range). Insulation sheel has a thin external layer made of 80 kg/m³ density polyetylene cross linked foam and a thicker internal layer made of 29 kg/m³ density polyetylene cross linked foam. Total thickness: 20 mm.

Feature	Insulation case	
Density [kg/m³]	29	80
Operating temperature range [°C]	-60 / +90	-60 / +90
Thermal conductivity [W/mK]	0.040	0.049
Thickness [mm]	18	2



Cross section insulation sheel

### **EN Generals**

Pettinaroli does not accept any liability for improper or wrong use of this product.

Always protect the pressure regulator by using strainers upstream of the valve and, in any case, make sure water quality complies with UNI 8065 standards (Fe < 0.5 mg/kg and Cu < 0.1 mg/kg).

Furthermore, maximum iron oxide in the water passing through control valve (PICV) should not exceed 25 mg/kg (25 ppm). To ensure the main pipework is cleaned appropriately, flushing by-passes should be used without flushing through the pressure regulator of the PICV thereby preventing dirt that might clog the valve.



# Fratelli Pettinaroli Spa

Via Pianelli, 38 - 28017 San Maurizio d'Opaglio (NO) - Italy Tel. +39 0322 96217 - +39 0322 96545 - Fax +39 0322 96546 info@pettinaroli.com - www.pettinaroli.com



<sup>\*</sup>The product color may be different with the actual product color due to printing procedure. \*The appearance and specifications may change with no prior notice for improvement.

<sup>\*</sup>The data and photo should not be used without permission of the copyright holder.